

Casablanca

Villa Hakone




Casablanca

Villa Hakone



〒250-0522
神奈川県足柄下郡箱根町
元箱根93-108

93-108 Motohakone, Hakone-machi,
Ashigarashimo-gun, Kanagawa
250-0522

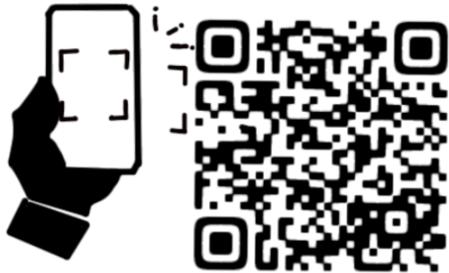

Wi-Fi

SSID : Casablanca Villa Hakone

PW : VillaHakone2025

ご滞在中、何かございましたら、こちらよりお気軽にスタッフまでご連絡ください。

If you need any assistance during your stay, please feel free to contact our staff.

TEL 050-3551-6687

Official LINE



Casablanca

Villa Hakone

IH COOKING HEATER	3
FISH GRILL	4
①Auto Mode.....	4
②Manual Mode.....	4
③Oven Mode.....	4
OVEN HEATER	5
①MANUAL mode.....	5
②AUTO mode.....	6
DISHWASHER	7
COFFEE MACHINE	8
RICE COOKER	9
BBQ	10
ECO SMART	11
SPEAKER	12
Connecting to a PHONE.....	12
Connecting to a TV(Using Bluetooth).....	13
TV	14
LAUNDRY	15
FLOOR HEATING	16
AIR CONDITIONER	17
BATH WATER HEATER	17
DRESSING ROOM AIR CONDITIONER	17
RECOMMENDATIONS	18


Casablanca

Villa Hakone

IH COOKING HEATER

〈 How to Use 〉

1. Turn ON → Press this: ①
2. Mode Selection < > buttons.
3. Start Heating (selected Stove) Press this: ●○ (left side)
4. Adjust Temperature with < > buttons.

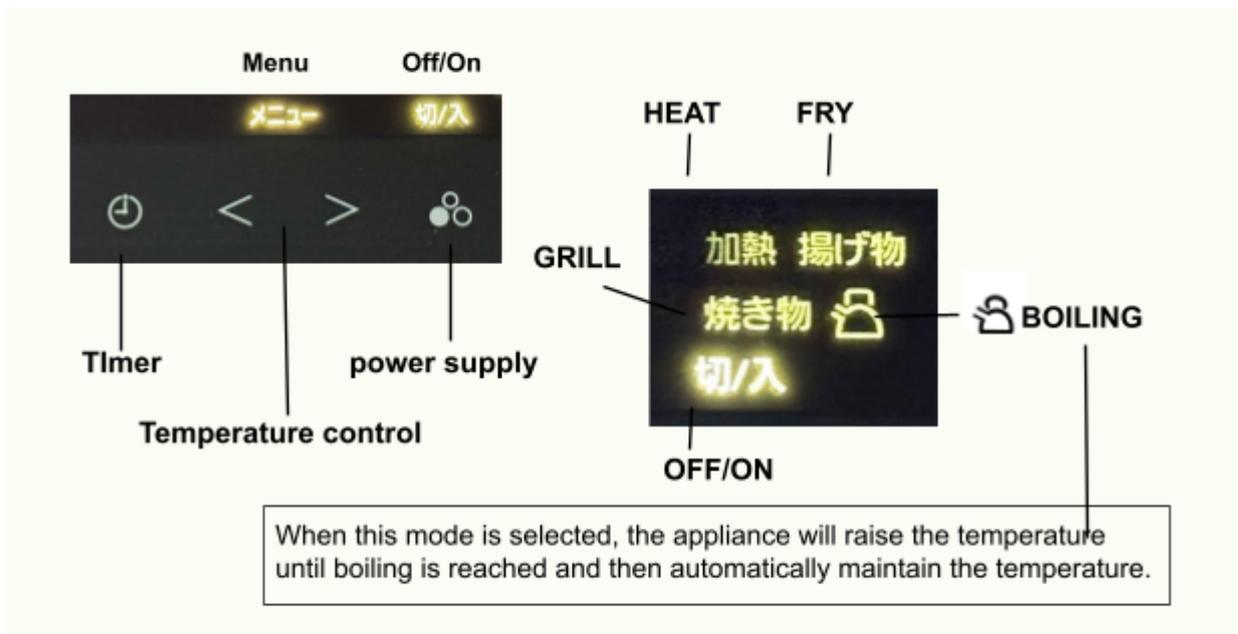

Timer Setting

1. Turn ON → Press this: ●○
2. Press this: ①, and set Time with < > buttons (00h: 00m).
Once the time is set, the timer will start automatically.

※Notes

- Do not operate the appliance while empty.
- Add Headings (Format > Paragraph styles) and they will appear in your table of contents.
- Please avoid touching it until the red indicator light has turned off completely.

Casablanca

Villa Hakone


FISH GRILL

< How to Use >

1. Turn ON on the IH stove → Press this: ①
2. choose from ①Auto, ②Manual, or ③Oven
→ Press this: ④ Menu

① Auto Mode

1. Mode Selection < > buttons.
2. Start → Press this: 
3. Select **Low**, **Medium**, or **High** heat with < > buttons.

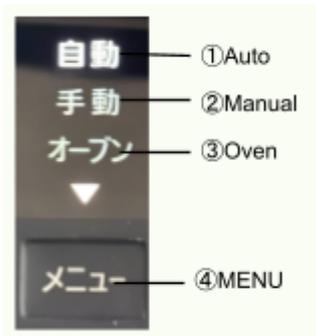

② Manual Mode

1. Press this: , and set time with < > buttons.
2. Start → Press this: 
3. Select **Low**, **Medium**, or **High** heat with < > buttons.




③ Oven Mode

1. Adjust Temperature with < > buttons.
2. Press this: , and set time with < > buttons.
3. Start → Press this: 

Casablanca

Villa Hakone

OVEN HEATER

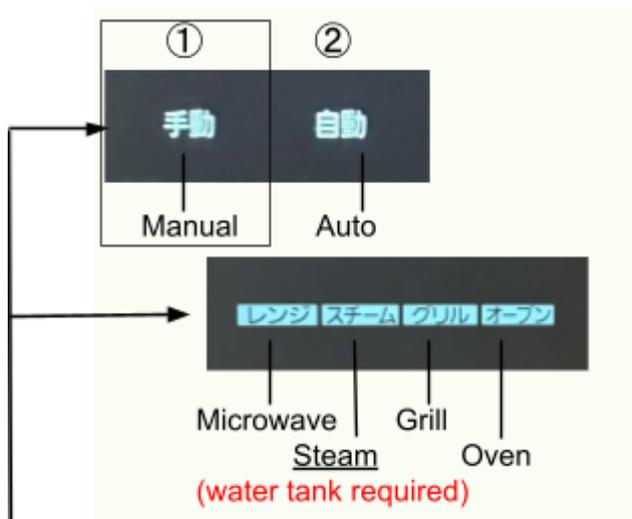

① **MANUAL mode**

〈How to Use〉

1. Mode Selection Manual button.
2. Set the microwave power or oven temperature with < > buttons.
3. Set the time with + / - buttons.
4. Start → Press this: 



water tank

Casablanca

Villa Hakone

②AUTO mode

〈How to Use〉

1. Mode Selection Auto button.
2. Select a cooking program from 1 to 27 with < > buttons.
3. Set the portion size or desired finish with + / - buttons.
4. Start → Press this: ◇

※Notes

• Do not use metal containers, canned foods, the included wire rack, or square stamps when heating with microwave energy.

• Examples: metal cake pans, aluminum foil, aluminum food cups, etc.

• Heat the instant meals according to the instructions on the package.

• The included wire rack can only be used with certain Auto menus.

• To Check the Food During Cooking, open the door to check without pressing the Ⓢ button.

• Close the door and press the ◇ button to resume cooking.

• Do not touch hot parts (the heater, door, or interior surfaces) with bare hands during or after cooking using the heater or steam functions.

Auto options



JAPANESE	ENGLISH
■ 毎日使い 1 あたため 2 飲み物 3 酒かん 4 スチーム解凍 (gセット) 5 トースト(裏返し)	■ Everyday Use 1 Heating 2 Beverages 3 Warm Sake 4 Steam Defrost 5 Toast
■ 蒸し野菜 6 蒸し青菜 7 蒸しブロッコリー 8 蒸しじゃがいも	■ Steamed Vegetables 6 Steamed Leafy Greens 7 Steamed Broccoli 8 Steamed Potatoes
■ スチーム 9 冷凍肉まん あたため 10 肉まん(手作り) 11 えび蒸しぎょうざ 12 手作りしょうまい 13 アクアパッツア 14 鶏ハム 15 茶わん蒸し 16 ゆで卵 17 温泉卵	■ Steam 9 Frozen Meat Bun 10 Meat bun 11 Shrimp steamed Dumplings 12 Homemade Shumai 13 Acqua Pazza 14 Chicken Ham 15 Chawan-mushi 16 Soft-Boiled Egg 17 Hot-spring Egg
■ 焼き物 18 フライドポテト 19 マカロニグラタン 20 手羽元香味焼き 21 油淋鶏 22 スペアリブ 23 焼き豚	■ Grilled/Baked Dishes 18 French Fries 19 Macaroni Gratin 20 Grilled Chicken Wings 21 Oil-Free Fried Chicken 22 Spare Ribs 23 Roast Pork
■ お菓子・パン 24 蒸しプリン 25 スポンジケーキ 26 シュークリーム 27 フランスパン	■ Sweets&Bread 24 Steamed Pudding 25 Sponge Cake 26 Cream Puffs 27 French Bread
■ お手入れなど 28 庫内 29 脱臭 30 洗浄・水抜き 31 クエン酸洗浄	■ Maintain/Care

**Water tank
required**

Casablanca

Villa Hakone

DISHWASHER

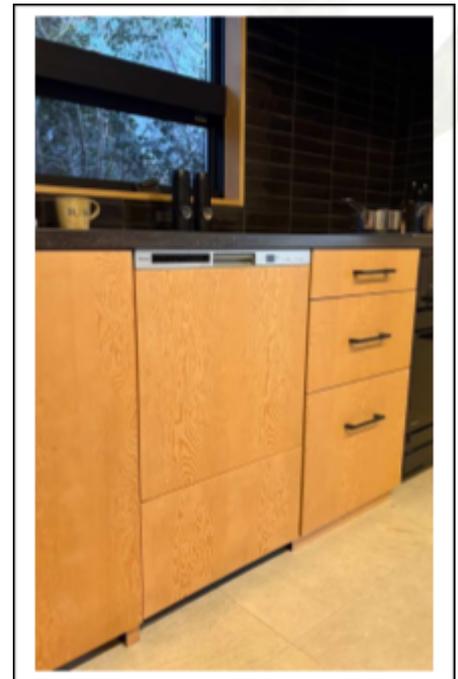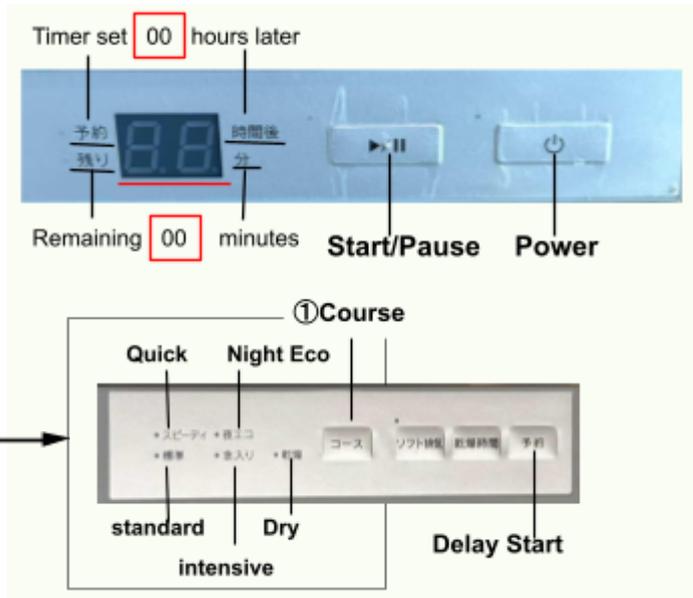

< How to Use >

1. Rinse off leftover food and stuck-on residue, then place the dishes on the rack.
- ②. Turn on the unit → Press this: ⏻
3. Select a course with the ① course button.
4. Put dishwasher detergent into the detergent compartment on the inside of the door (Do not use regular dish soap.)
5. Close the door and Start → Press this: ▶||

※Notes


- Dispose of large food scraps and remove heavy residue before loading to prevent clogs and poor washing performance.
- Use only dishwasher detergent. Never use regular dish soap, as it creates excessive foam.
- Do not overload the dishwasher. Keep the spray arm unobstructed, and place plastic items on the upper rack.



Casablanca

Villa Hakone

COFFEE MACHINE

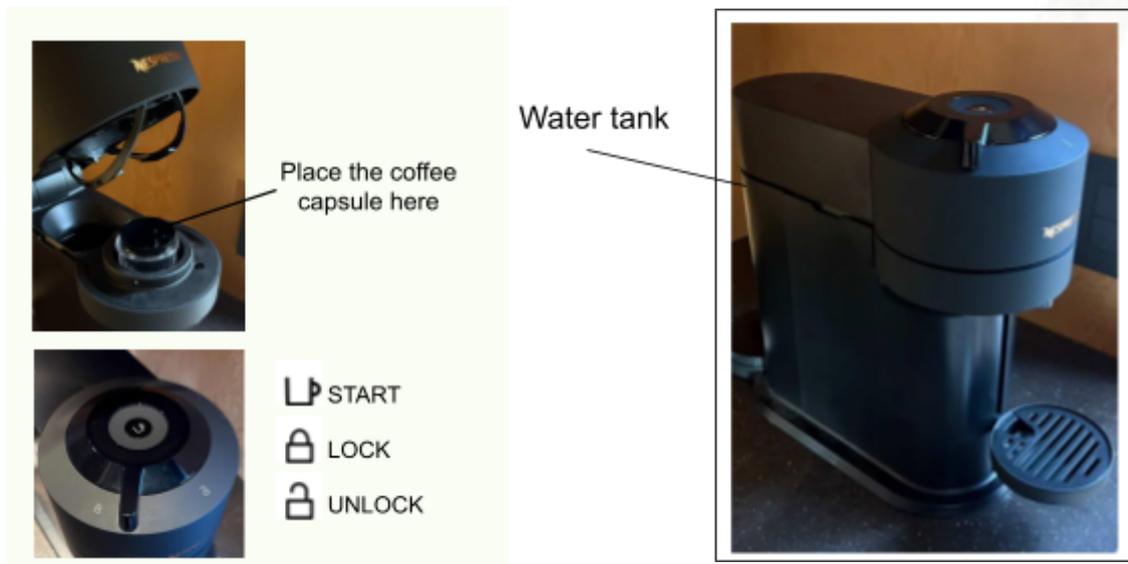

< How to Use >

1. Make sure the water tank is filled with enough water.
2. Open the lid → Turn the lever  to .
3. Insert the capsule into the holder.
4. Place the cup under the outlet.
5. Close the lid and turn the lever to .
6. Start extraction → Press this: 

※Notes

- Depending on the capsule, the liquid may overflow during extraction.
- Do not leave the machine unattended until extraction is complete.



COFFEE CAPSULE	
Ethiopia 150ml Floral aroma and delicate flavor	
Orafio 40ml Caramel-like aroma and roasty notes	
Double Espresso Chiaro 80ml Dence and powerful	
Fortard 150ml Bold, full bodied richness	

Casablanca

Villa Hakone

RICE COOKER



< How to Use >

1. Measure the rice, wash it, add water, then place the pot in the rice cooker.

2. Rice selection ④ RICE button.

3. press ① PREMIUM button once if you want it premium.

4. press ⑤ COURSE button once if you want quick cooking.

5. Start → Press this: ⑨ COOK

6. Wait until the cooking is complete.



—Rice options—

JP	白米	玄米
EN	White rice	Brown rice



how to prepare the rice

1. Measure the rice, one cup at a time (up to a maximum of 5 cups.)

2. Wash it.

3. Place the rice and fresh water into the pod. (the number of cups = the matching line on the pot).

4. Then return to 2 to continue.

Casablanca

Villa Hakone

BBQ

〈 How to Use 〉

1. Open the main gas valve located inside the box below.
2. Press and turn the left dial to 
3. Press and hold this:  , until the flame ignites.
(Once the flame ignites, adjust the heat level as needed)
4. Use the right dial as needed as well.
5. Grill the ingredients. (it cooks faster when you grill with the lid closed)
6. After use, be sure to turn off the main gas valve.



the main gas valve



-  Power apply
-  high/first point/prepare
-  medium
-  low
-  off

※Notes


Please make sure to close the main gas valve after each use.

Casablanca

Villa Hakone

ECO SMART

〈 How to Use 〉

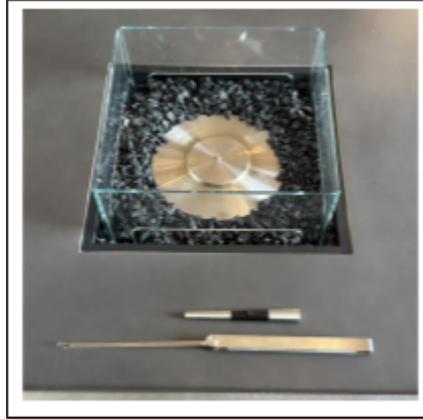

1. Use the rod to open the lid.



3. Using the lighter, ignite the tip of the rod. Bring the rod close to the fuel inside the EcoSmart to ignite it.

(When lighting the fire, be careful as the flame may flare up)



2. Apply a small amount of fuel to the tip of the rod.



4. To extinguish the flame, use the rod to close the lid

※Notes

- The lid and the main unit may become extremely hot. Always use the lighting rod during operation and do not touch the lid with bare hands.
- Never place your hands or any objects inside the EcoSmart unit.
- Do not burn or heat items using this device.

Casablanca

Villa Hakone

SPEAKER




< How to Use >

Connecting to a PHONE

iPhone ( AirPlay-compatible devices):

1. Turn on the unit → press and hold this: 
(The indicator light at the bottom will illuminate white.)
2. Choose the  AirPlay in your phone and
Establish the connection →
Select this: “Casablanca Speaker”

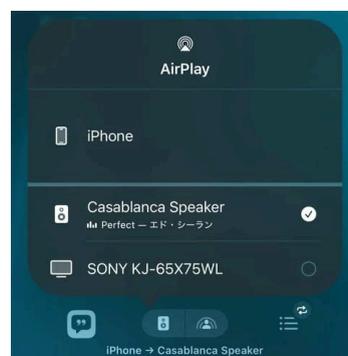

devices that do not support AirPlay or for Android devices (using  Bluetooth):

1. Turn on the unit → press and hold this: 
(The indicator light at the bottom will illuminate white.)
2. Press and hold this: speaker's  button until the front indicator light begins flashing blue.
3. Open  Bluetooth in your phone's settings and
Complete the connection → Select this: “Casablanca Speaker”



-  Mute
-  Bluetooth
-  Volume up
-  Play/Pause
-  Volume down
-  Power

Casablanca




Villa Hakone

Connecting to a TV(Using Bluetooth)

1. Turn on the unit → press and hold this: 
(The indicator light at the bottom will illuminate white.)
2. Press and hold this: speaker's Bluetooth
until the front indicator light begins flashing blue.
3. With the TV's remote control,
open quick Settings → Bluetooth, then
Complete the connection → select: "Casablanca Speaker" and "Connect"

Switching Between "TV Speakers" and "Casablanca Speaker"

1. From the Quick Settings menu on the TV's remote control,
Select:  Audio Output, choose either: "TV Speakers" or "Casablanca Speaker".

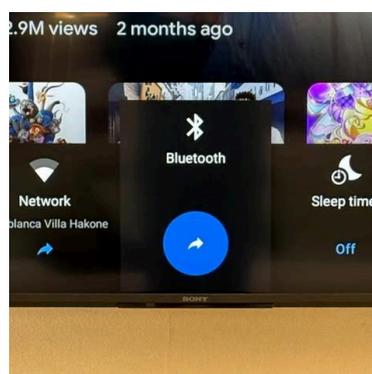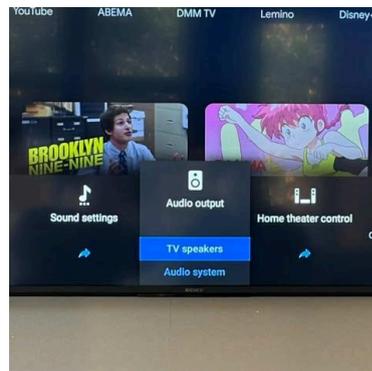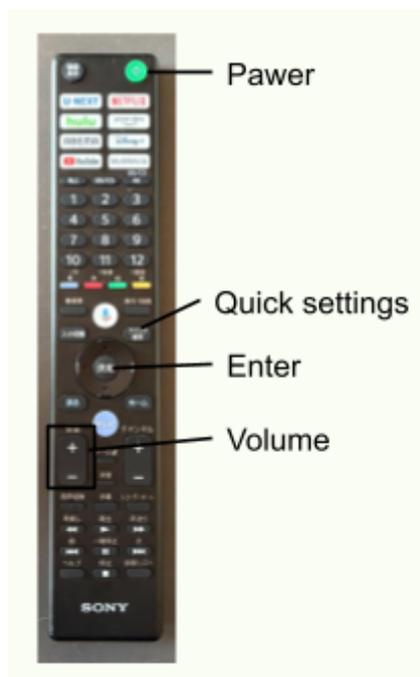

※Notes

- When the connection is unstable, please press and hold the  button to turn the device off and on again.

Casablanca

Villa Hakone

TV



–Available via the Villa’s Account (No Login Required)

You can watch the following services using the villa’s account.

Select the app from the TV screen to start watching.

- YouTube
- Netflix
- Amazon Prime Video
- TVer

Services Available with Your Own Account

If you have your own account, you may also use the following services.

Select the app and log in with your personal account to watch.

- Abema
- U-NEXT
- Hulu
- Disney+
- Other video streaming apps may also be available.

✂Notes

1. Please do not log out of or change the settings of the villa-provided accounts (such as Netflix and Amazon Prime Video).

2. If you log in using your personal account, please be sure to log out before check-out.

Casablanca

Villa Hakone

LAUNDRY



< How to Use >

1. Turn on→Press this: “Power” button
2. Place your laundry inside the drum.
3. Course selection: Wash Only, Wash & Dry, or Dry Only.
4. For Wash Only or Wash & Dry, place one detergent pod (located on the rack above the machine) into the washer, then press the “Start” button to begin the cycle.



※Notes

•Washing takes approximately 45 to 60 minutes.


•Drying takes approximately 3 to 5 hours.

(Please plan accordingly so that your laundry is completed before your checkout time.)

Casablanca

Villa Hakone


FLOOR HEATING

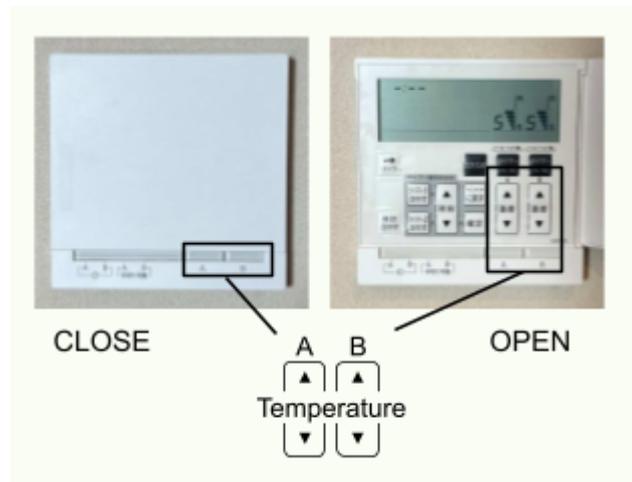

〈 How to Use 〉

1. Press the A or B button located at the lower right to turn the system on.
2. Use the temperature setting buttons to adjust to the desired temperature.
(Please note that once the floor heats up, the temperature may take time to decrease.)
3. To stop the system, press the A or B button again.

AIR CONDITIONER

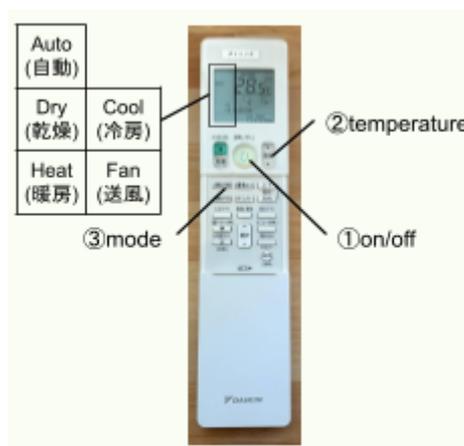


〈 How to Use 〉

1. Press the ③MODE button to select Auto, Heating, Cooling, Dehumidifying, or Fan.
2. Press the ①POWER button to start operation.
3. Use the ②TEMPERATURE buttons to adjust the temperature.

Casablanca

Villa Hakone

BATH WATER HEATER

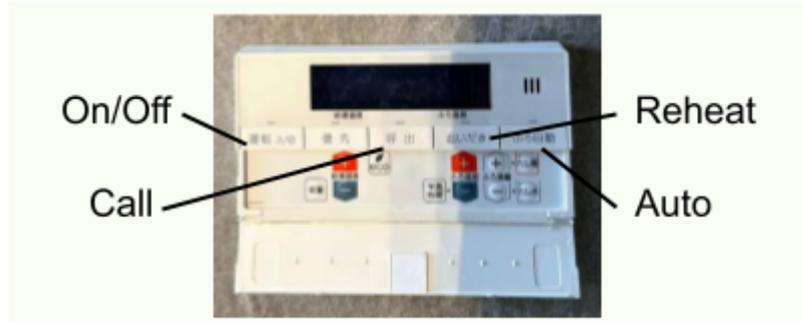


< How to Use >

1. Use the Operation On/Off button to turn the unit on or off.
2. Press the Auto Fill button to automatically fill the bathtub.
3. Use the Reheat function to warm the bathwater again.
4. Adjust the water temperature using the + and - buttons.

※Note

- Ensure the bathtub drain plug is securely closed before starting the auto-fill operation.
- If the shower doesn't produce hot water, turn on the bath water heater in the first-floor bathroom.

DRESSING ROOM AIR CONDITIONER

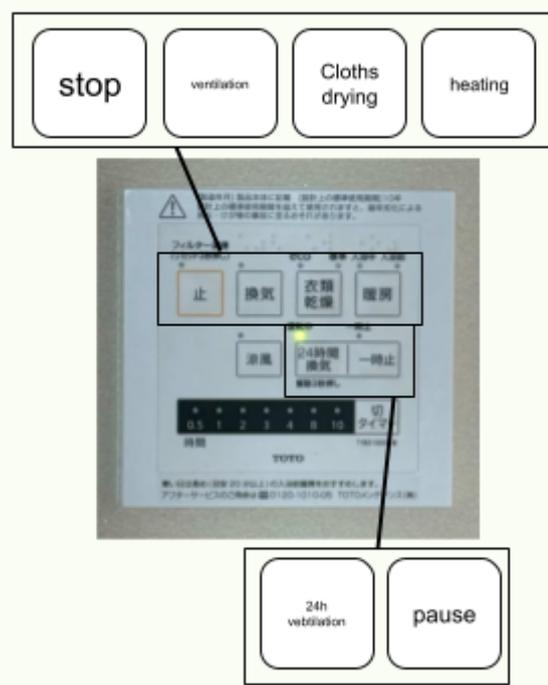

< How to Use >

1. Select this: "Clothes Drying" or "Heating/Ventilation."
2. If necessary, set the Timer (0.5 -- 10h).
3. Press "Pause/Stop" to suspend operation.
(Keep the door closed during operation and do not block the ventilation vent.)

Casablanca

Villa Hakone

<RECOMMENDATION>

JAPANESE CUISINE

—SOBA (NOODLES)—

どんぶり茶屋 (Donburi chaya)

ACCESS TIME: 車 10min, 電 22min
CLOSE: none
OPENING HOURS: 10:30-16:00
PRICE RANGE: ¥1,000~
ADDRESS: 15 hakone hakonemachi
TEL: 080-9490-5172



じねんじょ蕎麦 箱根 九十九 (Zinenzyo soba hakone tsukumo)

ACCESS TIME: 車 17min, 電 47min
CLOSE: none
OPENING HOURS: 10:00-20:00
PRICE RANGE: ¥2,000~
ADDRESS: 917-11 seingokuhara
TEL: 0460-84-8899



—SUSHI—

箱根鮎処 然-zen- (Hakone sushi dokoro zen)

ACCESS TIME: 車 40min, 電 15min
CLOSE: none
OPENING HOURS: 11:30-14:00, 17:00-21:00
PRICE RANGE: ¥10,000~
ADDRESS: 1300-442 gora
TEL: 050-3152-0460



強羅鮎 (Gora zushi)

ACCESS TIME: 車 16min, 電 47min
CLOSE: Tue, Wed
OPENING HOURS: 17:00-21:00
PRICE RANGE: ¥10,000~
ADDRESS: 1300-693 gora
TEL: 0460-83-9231



—UNAGI (EEL)—

—TEPPANYAKI —

うなぎ 元長 (Unagi motochou)

ACCESS TIME: 車 15min, 電 38min
CLOSE: none
OPENING HOURS: 11:30-21:30
PRICE RANGE: ¥3,000~
ADDRESS: 1300-218 gora hakonemachi
TEL: 0460-83-3852



ITOH DINING BY NOBU

ACCESS TIME: 車 14min, 電 36min
CLOSE: none
OPENING HOURS: 11:30-15:30, 17:00-21:00
PRICE RANGE: ¥10,000~
ADDRESS: 1300-64 gora
TEL: 0460-83-8209



Casablanca

Villa Hakone

WESTERN CUISINE

—BEER—

GORA BREWERY&GRILL

ACCESS TIME: 🚗 15min, 🚶 40min
CLOSE: none
OPENING HOURS: 13:00~20:30
PRICE RANGE: ¥ 4,000~
ADDRESS: 1300-72 gora
TEL: 0460-83-8107



BEER BAR BY GORA BREWERY

ACCESS TIME: 🚗 15min, 🚶 25min
CLOSE: none
OPENING HOURS: 11:30~20:30
PRICE RANGE: ¥ 2,000~
ADDRESS: 520-28 kowakudani
TEL: 0460-83-8509



—ITALIAN—

GORA BREWERY PUBLIC HOUSE

ACCESS TIME: 🚗 32min, 🚶 50min
CLOSE: none
OPENING HOURS: 11:30~21:00
PRICE RANGE: ¥ 3,000~
ADDRESS: 740 yumoto
TEL: 0460-83-9048



ラ・テラッツァ芦ノ湖 (La Terrazza ashinoko)

ACCESS TIME: 🚗 7min, 🚶 20min
CLOSE: none
OPENING HOURS: Weekdays 10:30~19:30
Weekends 9:00~19:30
PRICE RANGE: ¥ 2,000~
ADDRESS: 61 motohakone
TEL: 0460-83-1074



Casablanca

Villa Hakone

—CHANESE—

餃子センター (Gyoza center)

ACCESS TIME: 徒歩2min、バス40min
CLOSE: Wed afternoon, Thu
OPENING HOURS: 11:30~14:30, 17:00~19:30
PRICE RANGE: ¥1,000~
ADDRESS: 1300-537 gora
TEL: 0460-82-3457



山居自在 (Sankyo zizai)

ACCESS TIME: 徒歩12min、バス24min
CLOSE: none
OPENING HOURS: 12:00~15:00, 17:00~20:00
Fri, Sat 12:00~15:00, 17:00~21:00
PRICE RANGE: ¥1,000~
ADDRESS: 41-2 motohakone
TEL: 070-6516-9898



—BAKERY—

Bakery&Table箱根 (Bakery&Table hakone)

ACCESS TIME: 徒歩7min、バス20min
CLOSE: none
OPENING HOURS: 9:00~17:00
PRICE RANGE: ¥1,000~
ADDRESS: 9-1 motohakone
TEL: 0460-85-1530

